

Model 691A50/02 BNC Termination Enclosure Installation and Operating Manual

For assistance with the operation of this product, contact PCB Piezotronics, Inc.

Toll-free: 800-959-4464 24-hour SensorLine: 716-684-0001 Fax: 716-684-3823

E-mail: imi@pcb.com Web: www.imi-sensors.com







Warranty, Service, Repair, and Return Policies and Instructions

The information contained in this document supersedes all similar information that may be found elsewhere in this manual.

Total Customer Satisfaction – PCB Piezotronics guarantees Total Customer Satisfaction. If, at any time, for any reason, you are not completely satisfied with any PCB product, PCB will repair, replace, or exchange it at no charge. You may also choose to have your purchase price refunded in lieu of the repair, replacement, or exchange of the product.

Service – Due to the sophisticated nature of the sensors and associated instrumentation provided by PCB Piezotronics, user servicing or repair is not recommended and, if attempted, may void the factory warranty. Routine maintenance, such as the cleaning of electrical connectors, housings, mounting surfaces with solutions and techniques that will not harm the physical material of construction, is acceptable. Caution should be observed to insure that liquids are not permitted to migrate into devices that are not hermetically sealed. Such devices should only be wiped with a dampened cloth and never submerged or have liquids poured upon them.

Repair – In the event that equipment becomes damaged or ceases to operate, arrangements should be made to return the equipment to PCB Piezotronics for repair. User servicing or repair is not recommended and, if attempted, may void the factory warranty.

Calibration – Routine calibration of sensors and associated instrumentation is

recommended as this helps build confidence in measurement accuracy and acquired data. Equipment calibration cycles are typically established by the users own quality regimen. When in doubt about a calibration cycle, a good "rule of thumb" is to recalibrate on an annual basis. It is also good practice to recalibrate after exposure to any severe temperature extreme, shock, load, or other environmental influence, or prior to any critical test.

PCB Piezotronics maintains an ISO-9001 certified metrology laboratory and offers calibration services, which are accredited by A2LA to ISO/IEC 17025, with full traceablility to N.I.S.T. In addition to the normally supplied calibration, special testing is also available, such as: sensitivity at elevated cryogenic temperatures, phase extended response, high frequency response, extended range, leak testing, hydrostatic pressure testing, and others. For information on standard recalibration services or special testing, contact your local PCB Piezotronics distributor, sales representative, factory customer service representative.

Returning Equipment – Following these procedures will insure that your returned materials are handled in the most expedient manner. Before returning any equipment to PCB Piezotronics, contact your local distributor, sales representative, or factory customer service representative to obtain a Return

Materials Authorization (RMA) Number. This RMA number should be clearly marked on the outside of all package(s) and on the packing list(s) accompanying the shipment. A detailed account of the nature of the problem(s) being experienced with the equipment should also be included inside the package(s) containing any returned materials.

A Purchase Order, included with the returned materials, will expedite the turn-around of serviced equipment. It is recommended to include authorization on the Purchase Order for PCB to proceed with any repairs, as long as they do not exceed 50% of the replacement cost of the returned item(s). PCB will provide a price quotation or replacement recommendation for any item whose repair costs would exceed 50% of replacement cost, or any item that is not economically feasible to repair. For routine calibration services, the Purchase Order should include authorization to proceed and return at current pricing, which can be obtained from a factory customer service representative.

Warranty – All equipment and repair services provided by PCB Piezotronics, Inc. are covered by a limited warranty against defective material and workmanship for a period of one year from date of original purchase. Contact PCB for a complete statement of our warranty. Expendable items, such as batteries and mounting hardware, are not covered by warranty. Mechanical damage to equipment due to improper use is not covered by warranty. Electronic circuitry failure caused by the introduction of unregulated or improper excitation power or electrostatic discharge is not covered by warranty.

Contact Information – International customers should direct all inquiries to their local distributor or sales office. A complete list of distributors and offices be found at www.pcb.com. Customers within the United States may contact their local sales representative or customer factory service representative. A complete list of sales representatives can be found www.pcb.com. Toll-free telephone numbers for a factory customer service representative, in the division responsible for this product, can be found on the title page at the front of this manual. Our ship to address and general contact numbers are:

PCB Piezotronics, Inc. 3425 Walden Ave. Depew, NY 14043 USA Toll-free: (800) 828-8840

24-hour SensorLineSM: (716) 684-0001


Website: www.pcb.com E-mail: info@pcb.com

DOCUMENT NUMBER: 21354 DOCUMENT REVISION: B

ECN: 17900



The Model 691A50 Series Vibration BNC Breakout Boxes

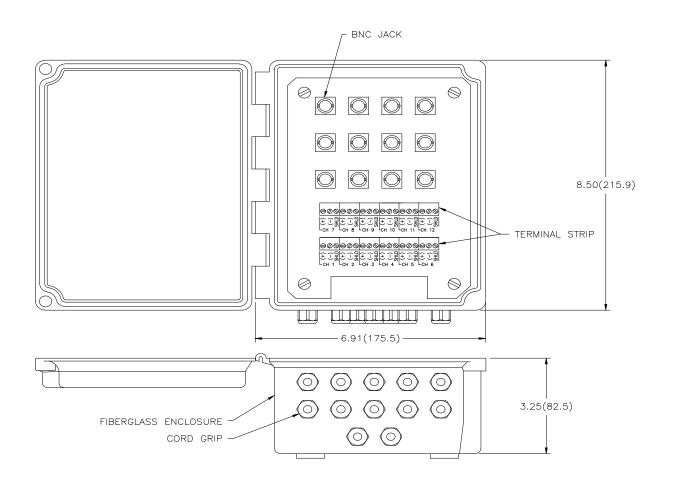

Operating Guide with Enclosed Warranty Information

3425 Walden Avenue, Depew, New York 14043-2495

Phone (716) 684-0003

Fax (716) 684-3823

Toll Free Line 1-800-959-4IMI

MANUAL NUMBER: 18423 MANUAL REVISION: NR







table of contents

Introduction	. page 3
Installation	. page 3

warranty/servicing

See Inserts for Warranty/Servicing Information



introduction

The Model 691A50 Series are Vibration BNC Breakout Boxes that provide terminal strip input with the convenience of BNC outputs. They are used in conjunction with commercially available data collectors and analyzers. They are available in 1 channel to 12 channel units, all housed in a NEMA enclosure. They come standard in a fiberglass, NEMA 4X (IP 66) enclosure with optional painted steel, NEMA 12 (IP65) or stainless steel, NEMA 4X (IP66) enclosure. One cord grip (PGME07) is installed on the bottom of the unit per channel. A few specifications are listed below for easy reference:

Input Connectors	3-Socket Terminal Strip
Output Connectors	BNC Jack
Cable Input	PGME07
Enclosure Type	NEMA 4X (IP66)
Size	8 x 6 x 4 in [203 x 152 x 102 mm]

installation

Establish an easily accessible location for installation and keep in mind that the cabling will be coming from the bottom panel of the enclosure. One PGME07 cord grip is installed for each channel ordered. Use the supplied mounting feet to install the enclosure.

NOTE: The unit has BNC connectors that can be easily contaminated. Install the unit away from sprays, cleaning fluids, steam, excess temperature (above 212°F) and other contaminants. Always keep door closed when not in use.





3425 Walden Avenue, Depew, NY 14043-2495 Phone: (716) 684-0003 • USA Fax: (716) 684-3823 • INTL Fax: (716) 684-4703

ICP ® is a registered trademark of PCB Piezotronics, Incorporated, which uniquely identifies PCB sensors that incorporate built-in microelectronics.

Model Number 691A50/02	BNC BREAKOUT BOX				Revision: NR ECN #:	
Performance	ENGLISH	<u>SI</u>	OPTIONAL VERSIONS			
Channels Environmental	2	2	Optional versions have identical specifications and accessories as listed for the standard mode except where noted below. More than one option may be used.			
Enclosure Rating	Name AV	IDOC	except where noted below.	more than one option in	nay be used.	
Physical	Nema 4X	IP66	PS - Painted Steel			
-	Tamain at Diant	Tamain at Diant	. =	1505		[
Electrical Connector (Input)	Terminal Block	Terminal Block	Enclosure Rating	IP65	Nema 12	
Electrical Connector (Output)	BNC Jack	BNC Jack	Weight	5.0 lb	2.3 kg	
Cable Input	PGME07	PGME07	88 00 1 00 15 1			
Housing Material	Fiberglass	Fiberglass	SS - Stainless Steel Enclosure			[1
Size (Height x Width x Depth) Weight	8 in x 6 in x 4 in 2.5 lb	203 mm x 152 mm x 102 mm 1.14 kg	Enclosure Rating Weight	IP66 5.5 lb	Nema 4X 2.5 kg	
All specifications are at room temperature. In the interest of constant product improduct improduct improduct improduct in the interest of PCB is a registered trademark of PCB.	ovement, we reserve the right to	o change specifications without notice.	NOTES: [1] Mounting kit integral to enclosure.			
			Entered: Engineer: Sale:		d: ///// Spec Nu	ımber:
			Date: Date: Date: Date	10/162 Date: 1	2065	52
			**************************************	Fax: 7	: 800-959-4464 16-684-3823 : imi@pcb.com	

